

LEWMAR®


68000967 3 BUTTON WIRELESS CONTROL

68000968 5 BUTTON WIRELESS CONTROL

RECOMMENDED WIRING DIAGRAMS FOR LEWMAR PRODUCTS:

- V700, Pro-Series, Pro-Fish, Pro-Sport with Sealed Contactor
- V700, Pro-Series, Pro-Fish, Pro-Sport with Pre-wired Contactor in box
- V1, V2, V3 & V5 with Sealed Contactor
- V1, V2, V3 & V5 with Contactor in Box
- V4 with Sealed Contactor
- V4 with Contactor in Box
- H2 & H3
- 140TT2.0kW Electric Thruster (5 Button Only)
- 140TT2.2kW, All 185TT, 250TT & 300TT Electric Thrusters (5 Button Only)


CIRCUIT BREAKER

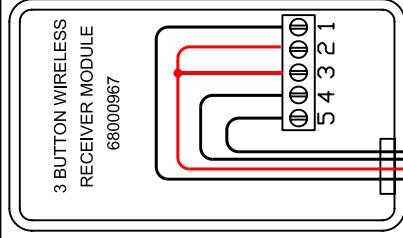

ELECTRIC SWITCHES




 ROCKER
SWITCH
(68000593)



FUSE 3A


CONTROL
BOX
(12V-0052509)
(24V-0052510)

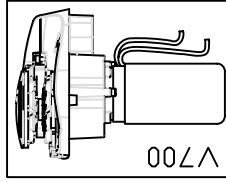


BATTERY
12/24VDC


Permanent Magnet Dual Direction Control Box - 0052509/10
Wiring Diagram 12/24VDC
Used on: Pro-Sport, Pro-Series/Fish 700 & 1000, V700, Concept 0, Sprint 600 & 1000, Horizon 600F & 900F

LEWMAR

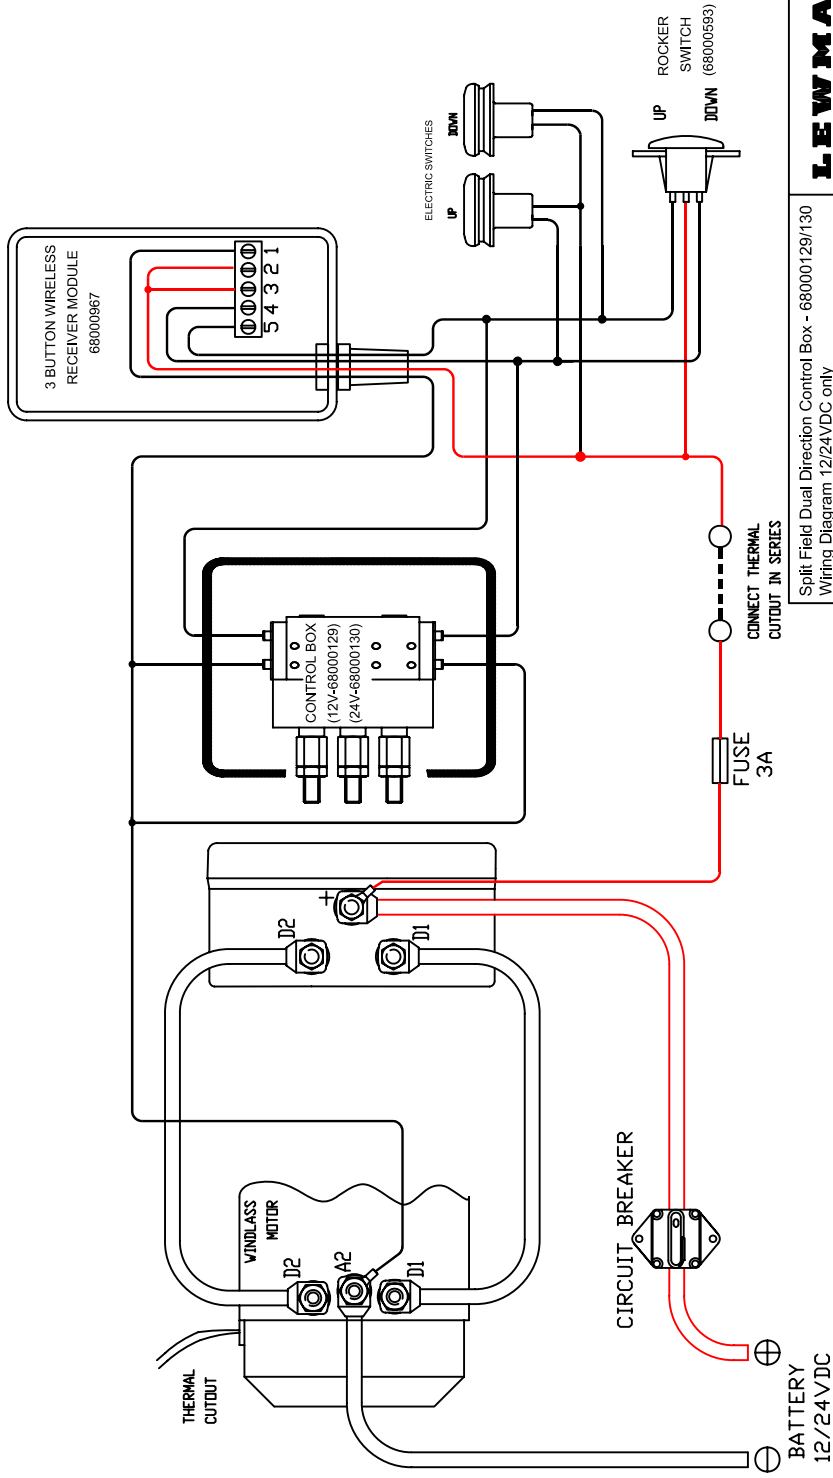



Split Field Dual Direction Control Box - 68000129/130
Wiring Diagram 12/24VDC only
Used on: Concept 1, V1, V2, V3, V5

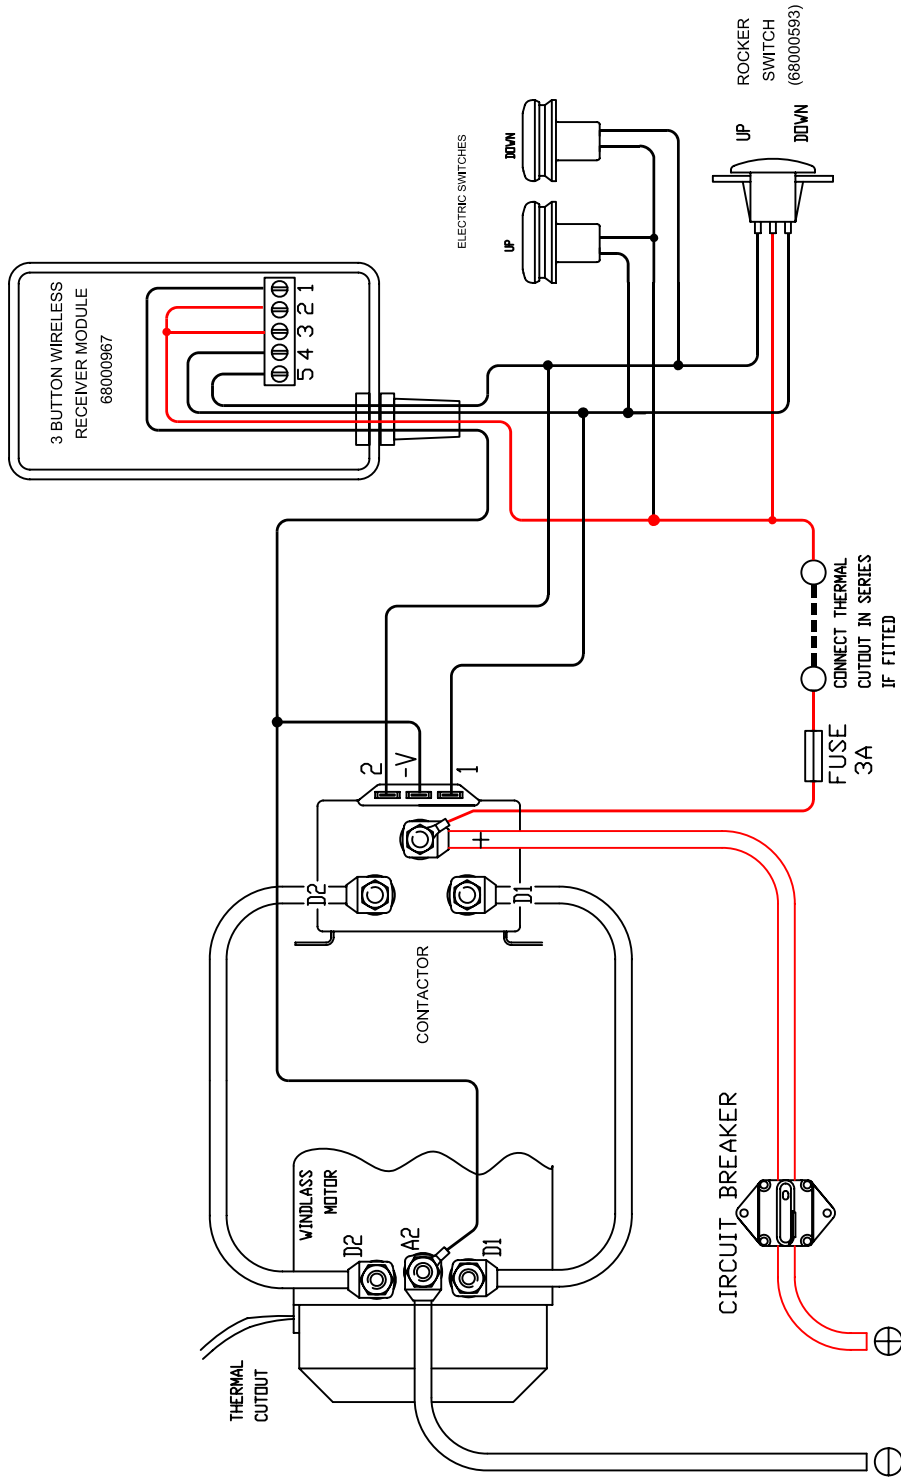

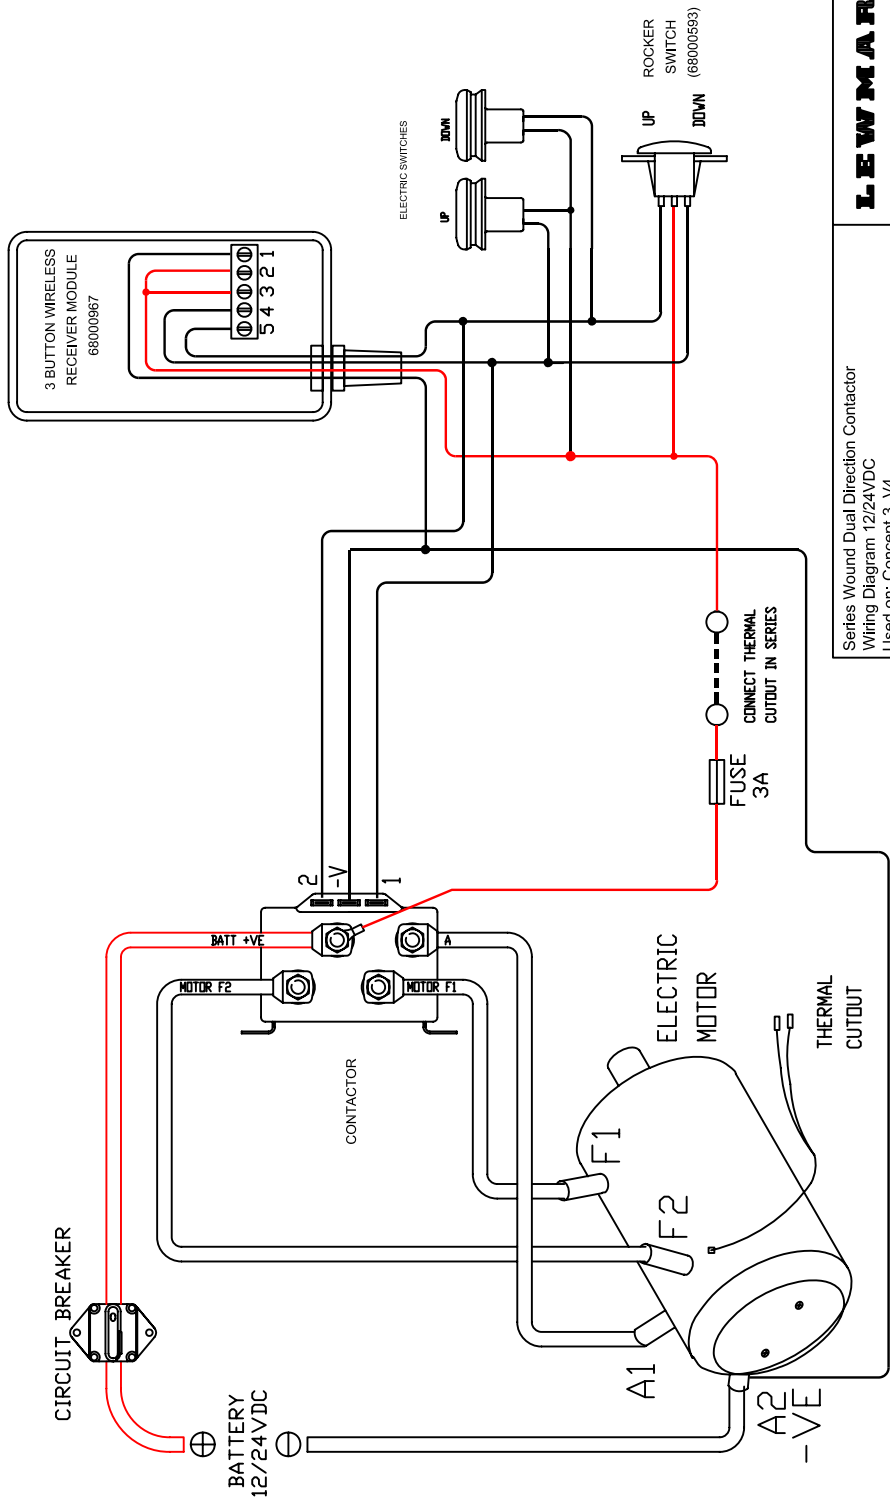


Series Wound Dual Direction Contactor
Wiring Diagram 12/24VDC
Used on: Concept 3, V4

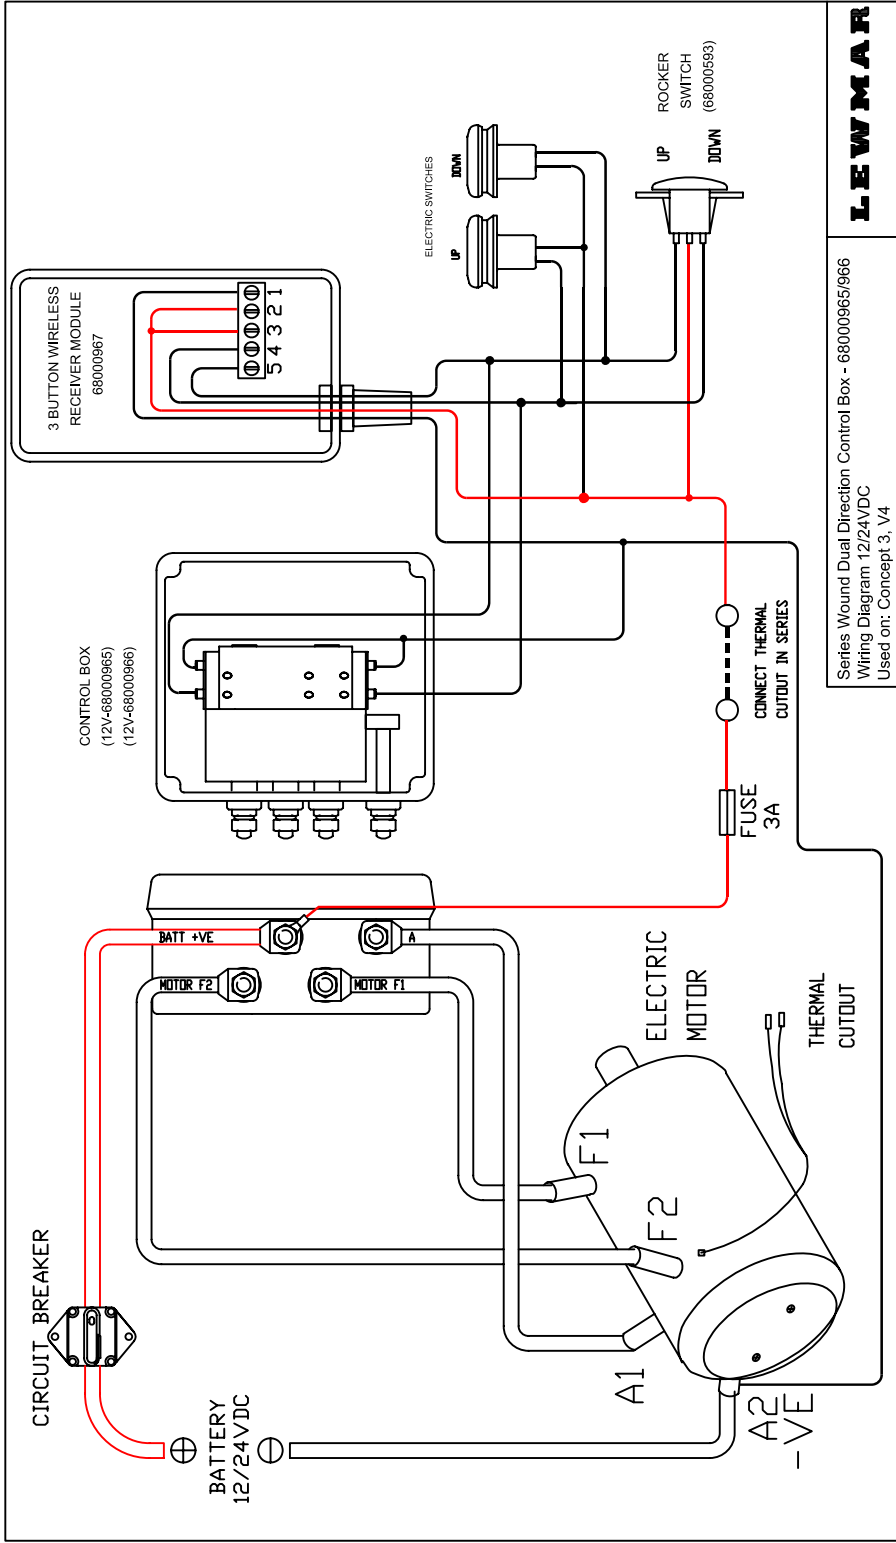

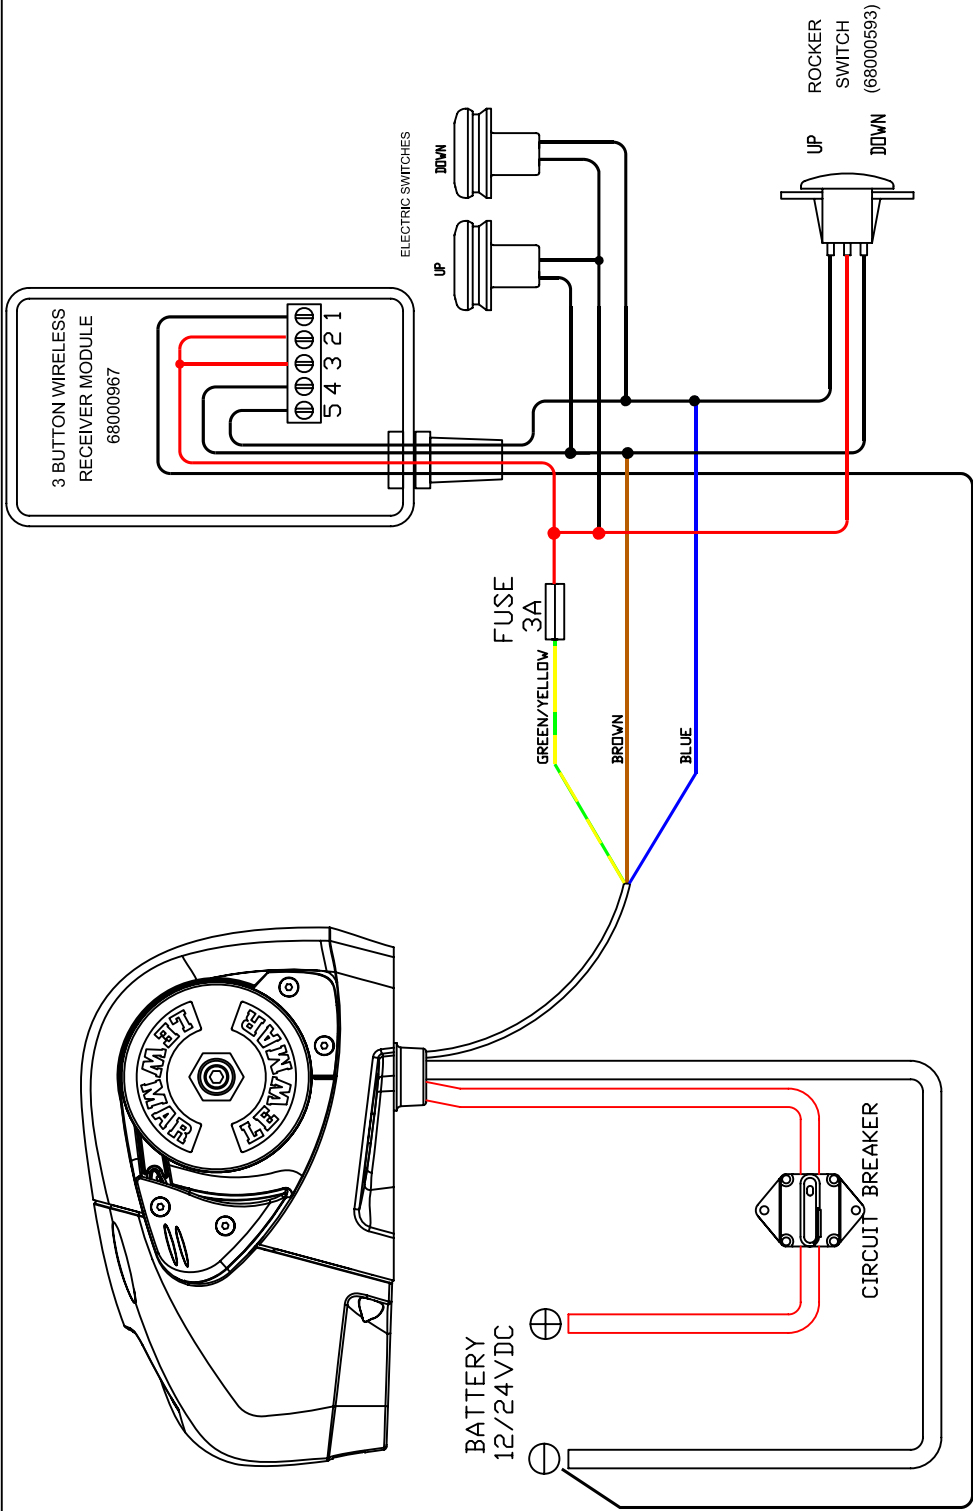


Wiring Diagram 12/24VDC
Used on: H2 & H3



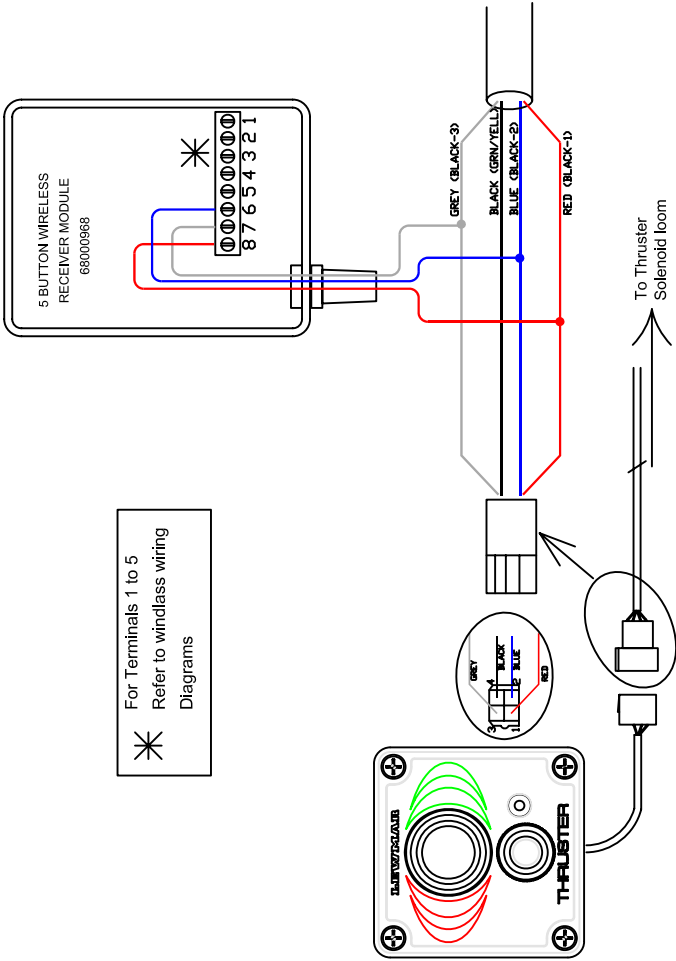


Thruster Positive Switching system
Wiring Diagram 12VDC
Used on: 140TT2.0KW only.

LEWMAR

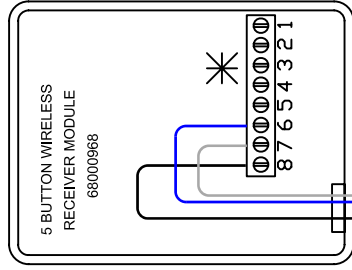

  * For Terminals 1 to 5
 Refer to wireless wiring
 Diagrams

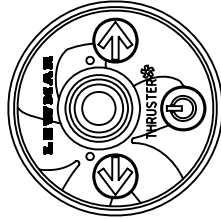

To Thruster Black box
 Via Automatic Battery switch if fitted
 and/or P/S Battery switch if fitted

Thruster Negative Switching system
 Wiring Diagram 12/24VDC
 Used on: 140TT, 2.2KW; All 185TT, 250TT, 300TT

LEWMAR